



Fracture Two-Tone Wall Panels

Premier Collection


Fracture Two-Tone is a double-layer acoustic wall panel precision cut to reveal the secondary base color. Various designs make up the 10 repeatable patterns that are entirely unique to Acoufelt.

Specifications

Surface	Wall
Material	FilaSorb™ polyester felt
Weight	14mm, 2800gsm
Standard Sizes	1200 x 2800mm <i>Custom sizes available</i>



Fracture Two-Tone Wall Panel with Barcode Pattern in Platinum and Flamingo

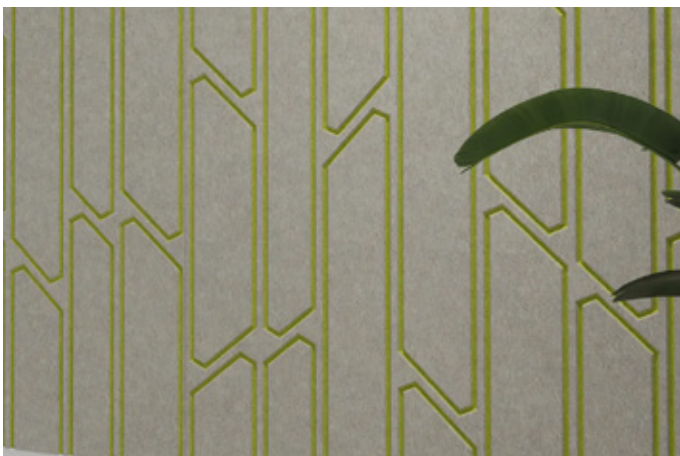

Fracture Two-Tone Wall Panel with Shard Pattern in Pistachio and Wasabi

Technical

NRC Rating	14mm* 0.55, no air gap 0.70, 20mm air gap 0.75, 50mm air gap 26mm** Pending product testing
Fire Test	AS ISO 9705:2033 According to AS 5637.7:2015 requirements Group 1 2.99
Water Sorption	ASTM C1104-2019 (A Modified) Water sorbed by weight: 0.20% (based on a 12mm thick panel)
Colorfastness	ISO 105-B02, 6-7

* Test results available upon request.

Details

Lead Time	Refer to Product Lead Time Matrix
Origin	Australia
Warranty	Product: 20 years* Colorfastness: 20 years*

* Conditions apply

Environmental































Recycled Content	Minimum 60%
Energy	Generated using 40% solar energy
Indoor Air Quality	VOC less than/equal to 0.5mg/m3
Recyclable	100%*
Certifications	Declare Certification - LBC Red List Free (third-party verified) SCS Global Indoor Advantage Gold

* PET is recyclable through participating partners.



For questions or additional product information,
visit acoufelt.com.au or call 1800 626 462

Fracture Two-Tone Wall Panels | March 2026

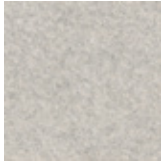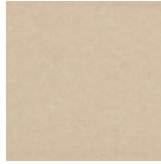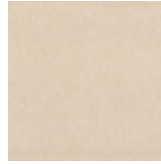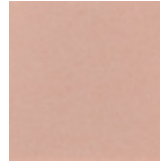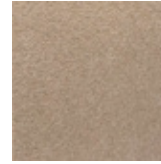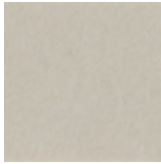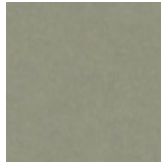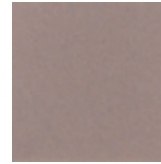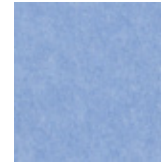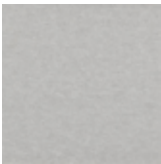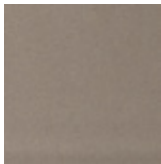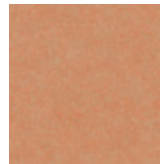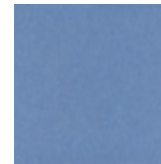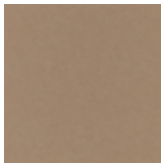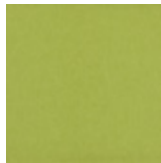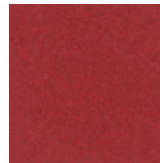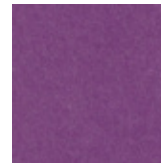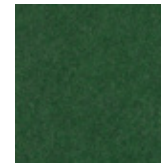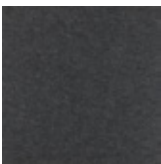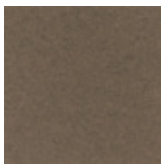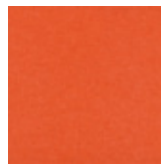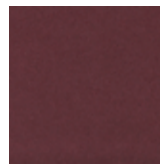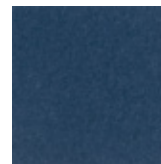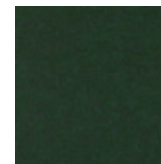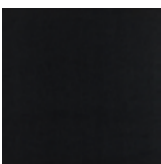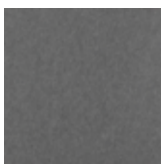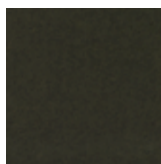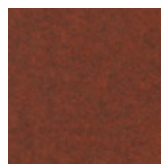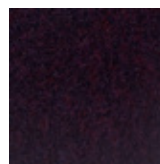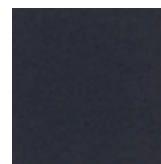							
White WH12	Milkyway MI74	Ivory IV11	Pearl PE21	Valentine VA70	Quartz QU67	Stonewash ST72	Sea Salt SE57
							
Platinum PL04	Almond AL55	Pistachio PI25	Turmeric TU60	Flamingo FL61	Amethyst AM69	Periwinkle PE23	Peacock PE20
							
Metal ME03	Mushroom MU75	Celery CE65	Wheat WH68	Peach PE19	Lilac LI13	Marine MA15	Sencha SE58
							
Grey GR02	Umber UM54	Wasabi WA29	Popcorn PO26	Currant CU59	Berry BE06	Azure AZ05	Oregano OR18
							
Charcoal CH01	Walnut WA56	Eucalyptus EU71	Carrot CA08	Loganberry LO77	Granite GR62	Denim DE09	Kale KA12
							
Piano Black PI24	Slate SL27	Nori NO76	Peppercorn PE22	Shiraz SH63	Flint FL64	Midnight MI16	




For questions or additional product information,
visit acoufelt.com.au or call 1800 626 462

Fracture Two-Tone Wall Panels | March 2026


Sizes

Standard Sizes 1200 x 2800mm
Custom sizes available

Plan

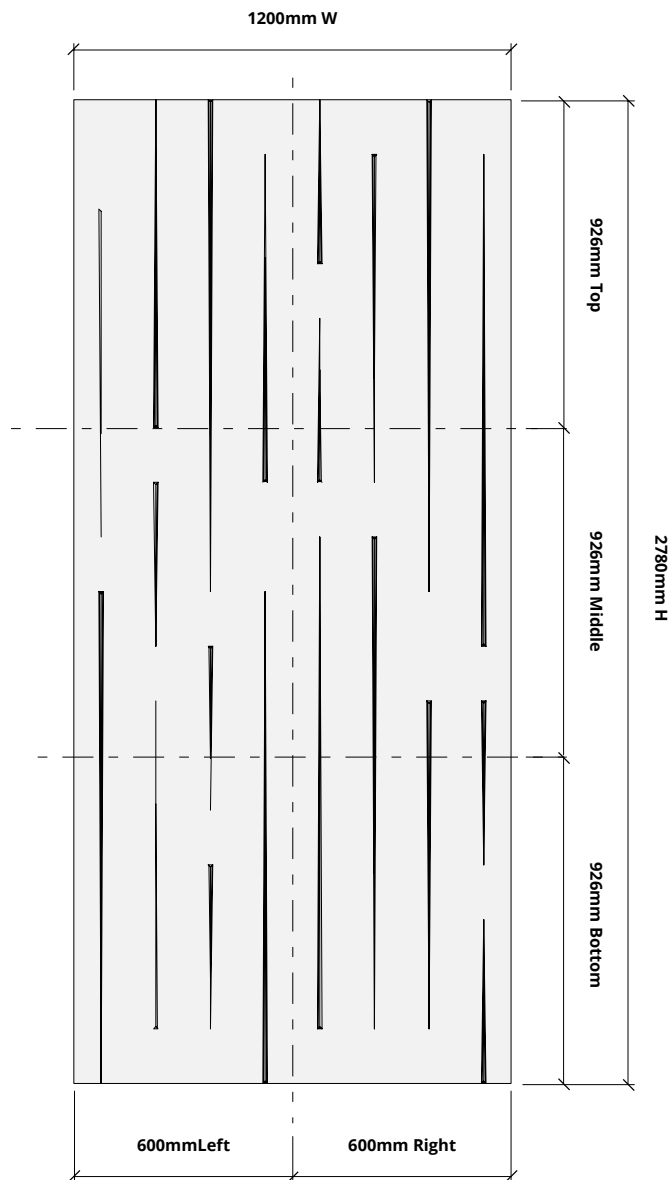

Perspective

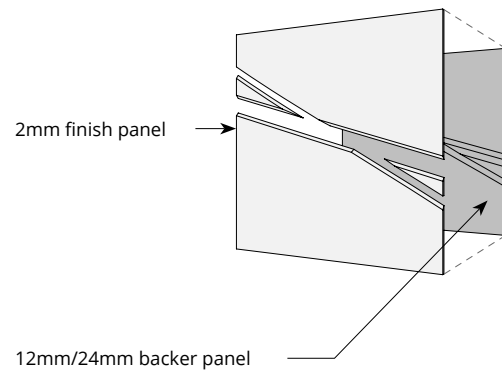

** Product available as full panels or as sections of a panel as filler pieces.
Choose any of the standard height or segments (i.e. bottom right, middle left, etc) to fill the space as needed.*



For questions or additional product information,
visit [acoufelt.com.au](https://www.acoufelt.com.au) or call 1800 626 462


Fracture Two-Tone Wall Panels | March 2026

How to Specify

1. Choose Panel Pattern

2. Choose Colorways


Select desired panel pattern. See recommended layouts for larger designs.

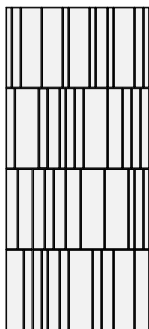


BARCODE




DASH

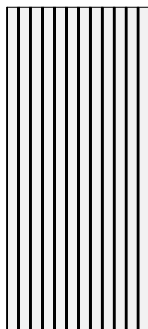


FINELINE

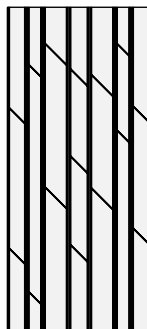


OPTICS

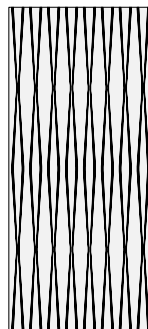


PARALLAX

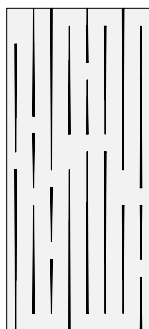


RAINDROP

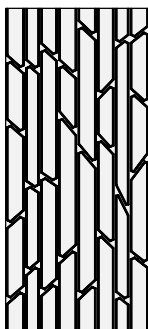


SHARD

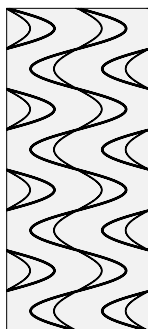

SMOKE

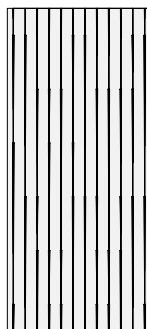

THREAD

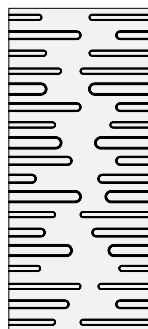


VAPOR

1. Choose Panel Pattern

2. Choose Colorways

Select two colors: one for the face panel and one for the back panel to create a Fracture Two-Tone that is uniquely yours. See colorways on page 3.

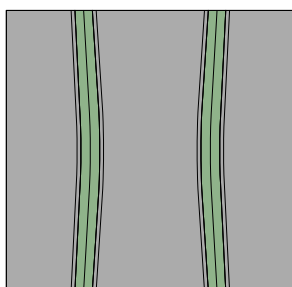

Parallax in Metal and Sencha




For questions or additional product information, visit [acoufelt.com.au](https://www.acoufelt.com.au) or call 1800 626 462


Fracture Two-Tone Wall Panels | March 2026

Recommended Layouts


Barcode

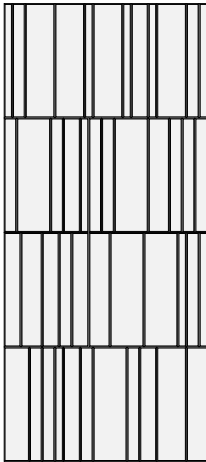


Layout 1

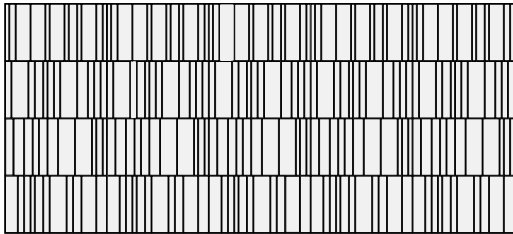


Layout 2

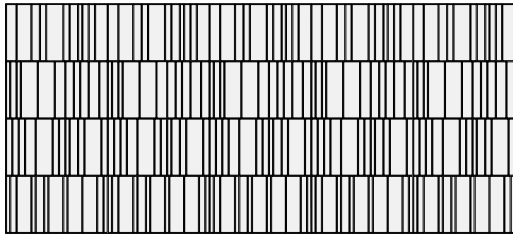


Layout 3

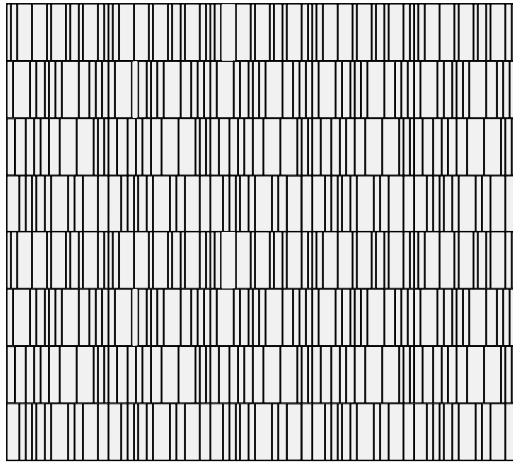

Layout 4

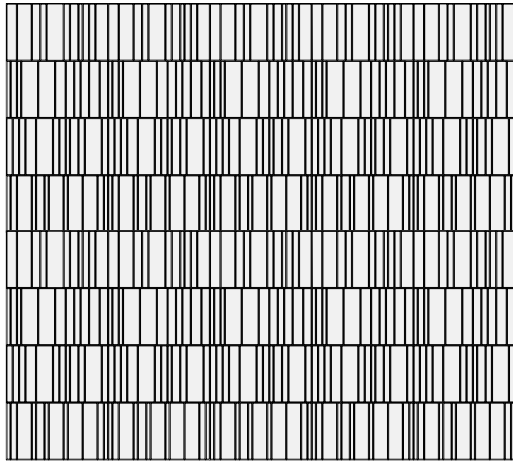

Perspective

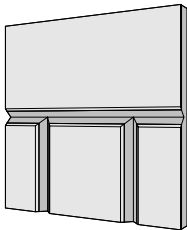


Recommended Layouts


Dash




Layout 1

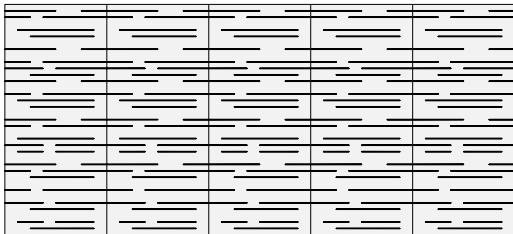


Layout 2

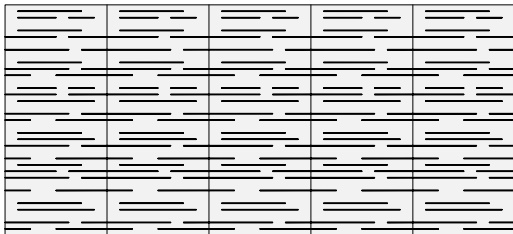


Layout 3

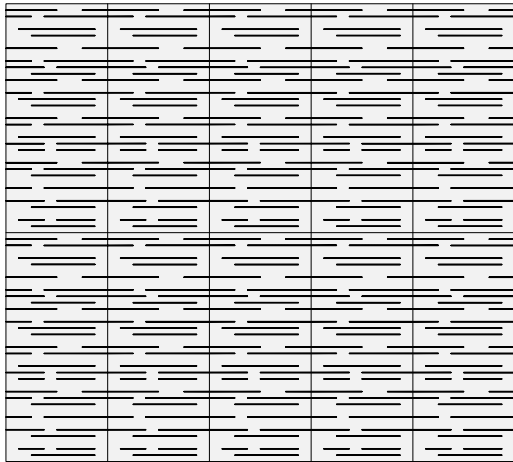

Layout 4

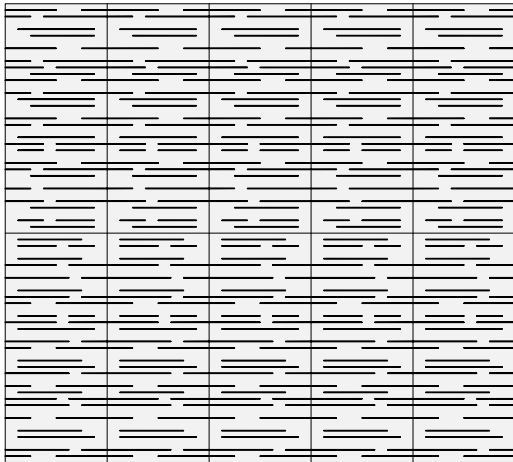


Perspective

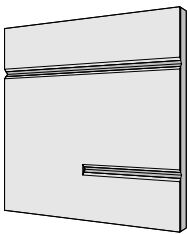


Recommended Layouts


Fineline

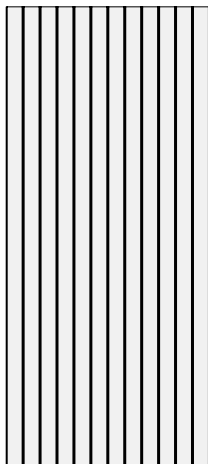


Layout 1

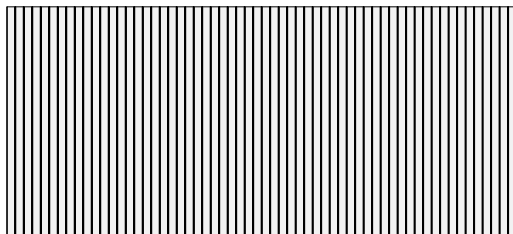

Layout 2

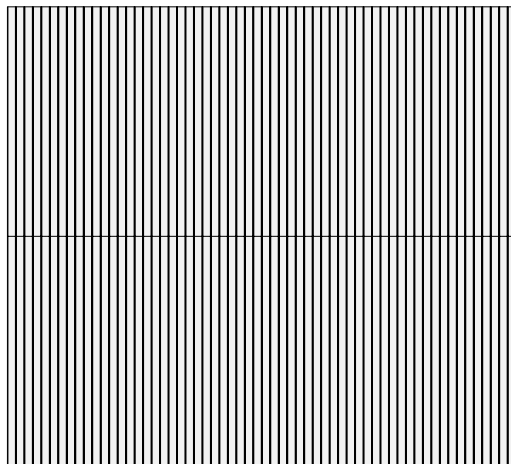

Perspective

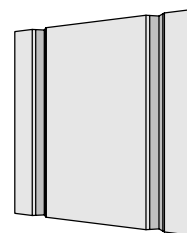


For questions or additional product information,
visit [acoufelt.com.au](https://www.acoufelt.com.au) or call **1800 626 462**


Fracture Two-Tone Wall Panels | March 2026

Recommended Layouts


Optics

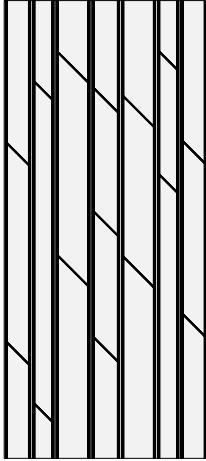


Layout 1

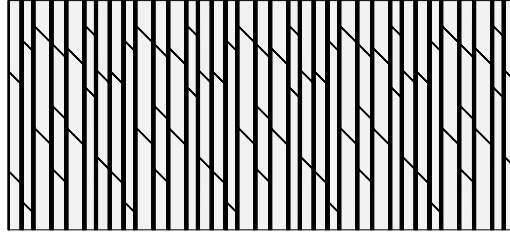


Layout 2

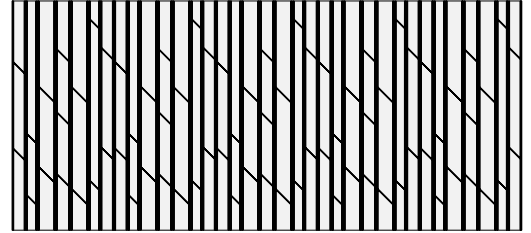


Layout 3

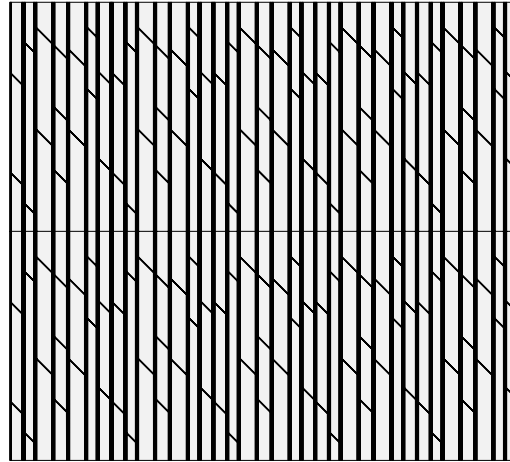

Layout 4

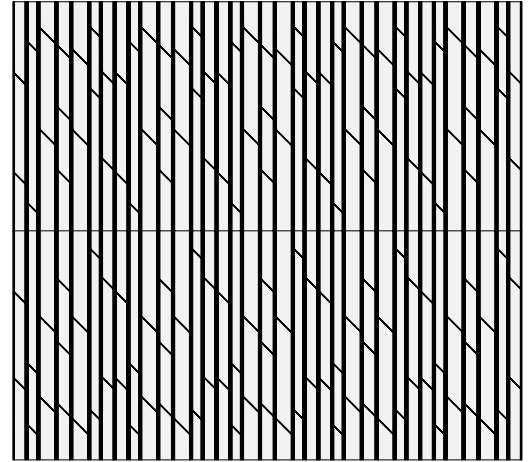

Perspective

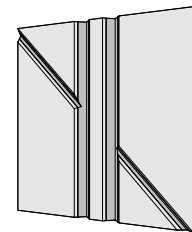


For questions or additional product information,
visit [acoufelt.com.au](https://www.acoufelt.com.au) or call 1800 626 462


Fracture Two-Tone Wall Panels | March 2026

Recommended Layouts


Parallax

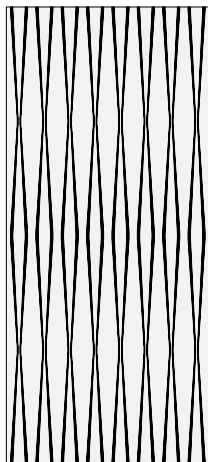


Layout 1

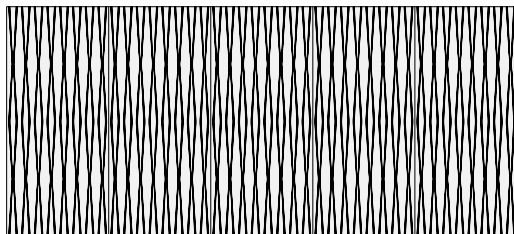

Layout 2

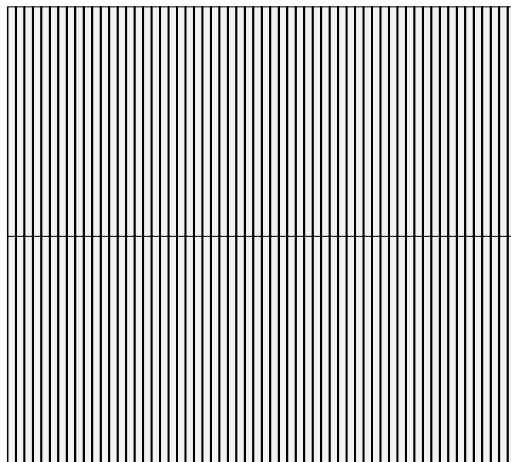

Perspective

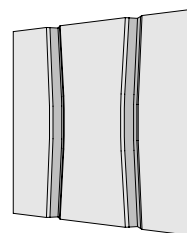


For questions or additional product information,
visit [acoufelt.com.au](https://www.acoufelt.com.au) or call **1800 626 462**


Fracture Two-Tone Wall Panels | March 2026

Recommended Layouts


Raindrop

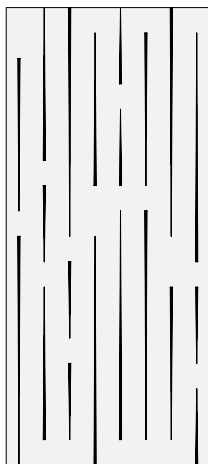


Layout 1

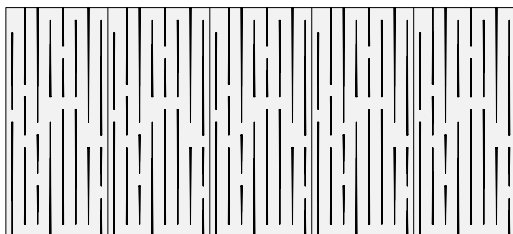


Layout 2

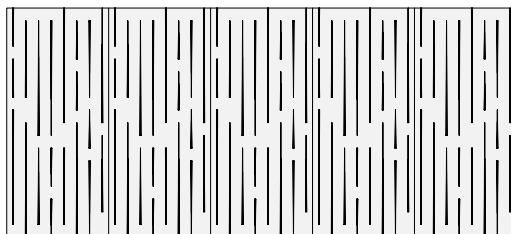


Layout 3

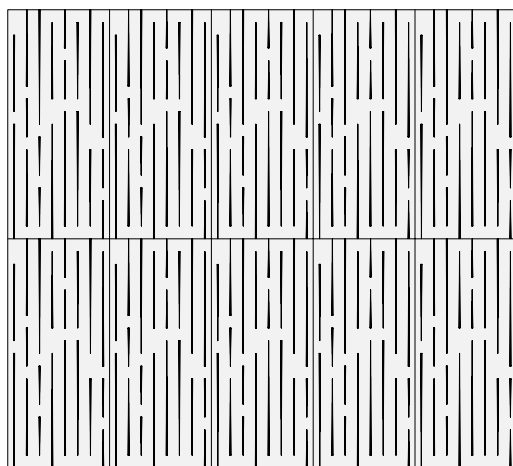

Layout 4

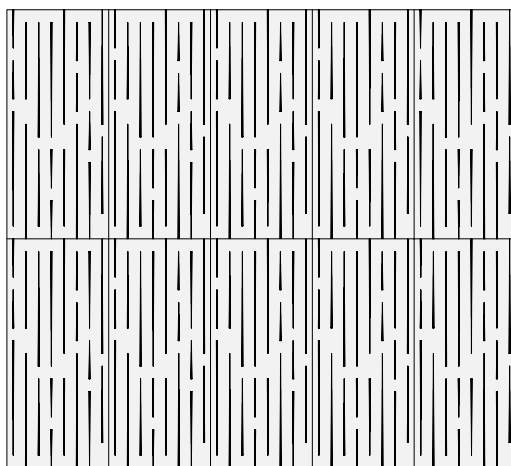

Perspective

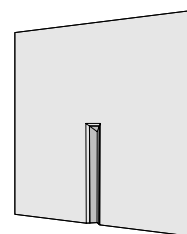


For questions or additional product information,
visit [acoufelt.com.au](https://www.acoufelt.com.au) or call 1800 626 462


Fracture Two-Tone Wall Panels | March 2026

Recommended Layouts


Shard

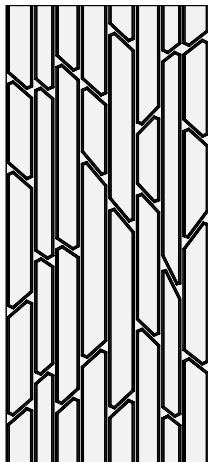


Layout 1

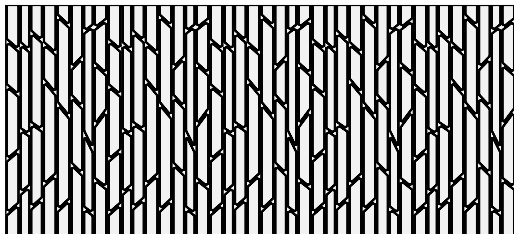


Layout 2

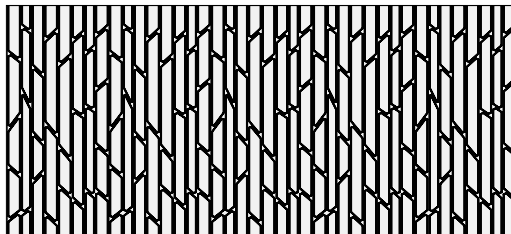


Layout 3

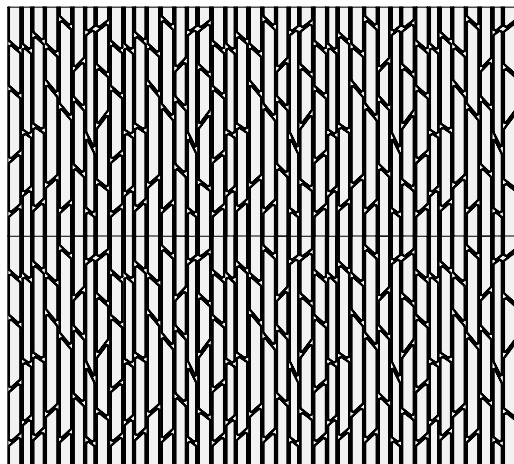

Layout 4

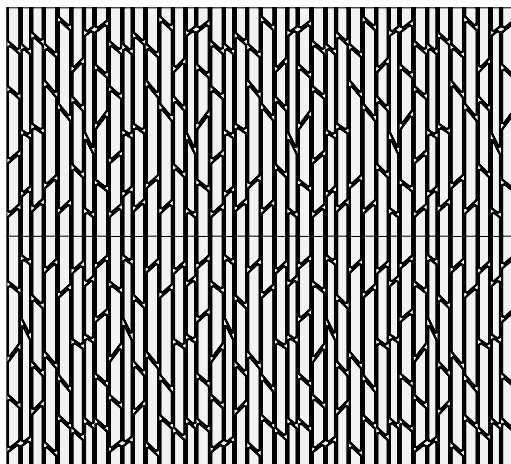

Perspective

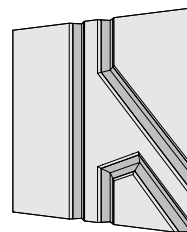


For questions or additional product information,
visit [acoufelt.com.au](https://www.acoufelt.com.au) or call 1800 626 462


Fracture Two-Tone Wall Panels | March 2026

Recommended Layouts


Smoke

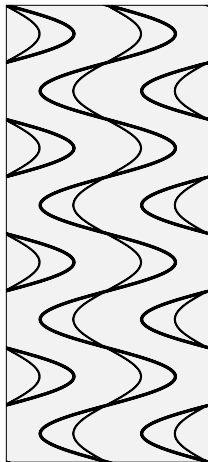


Layout 1

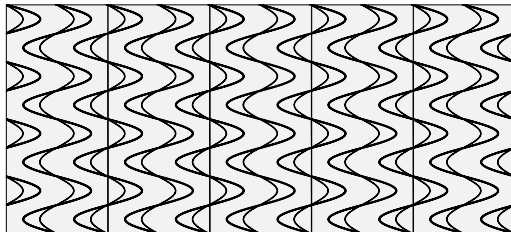

Layout 2

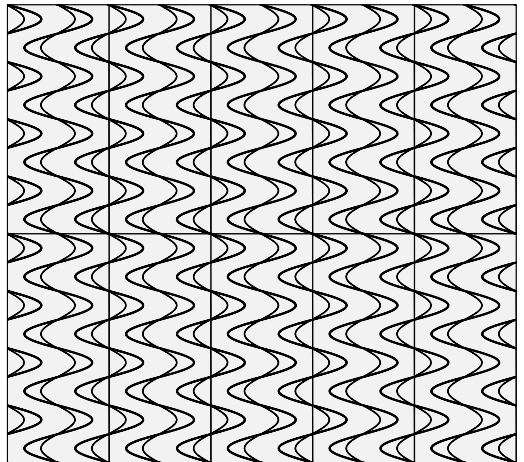

Perspective

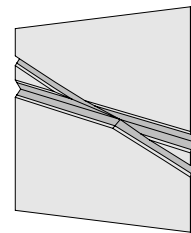


For questions or additional product information,
visit [acoufelt.com.au](https://www.acoufelt.com.au) or call 1800 626 462


Fracture Two-Tone Wall Panels | March 2026

Recommended Layouts


Thread

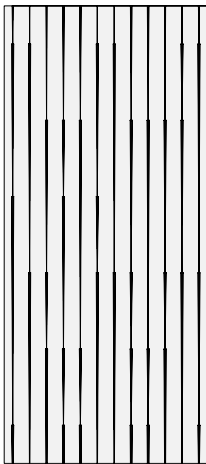


Layout 1

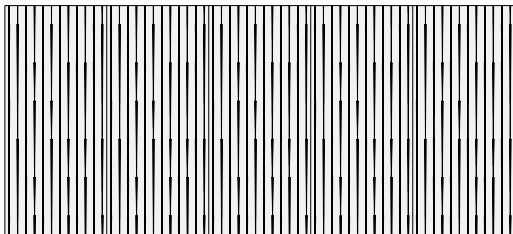


Layout 2

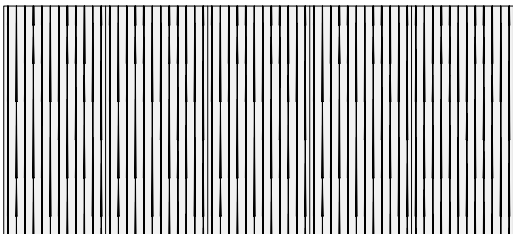


Layout 3

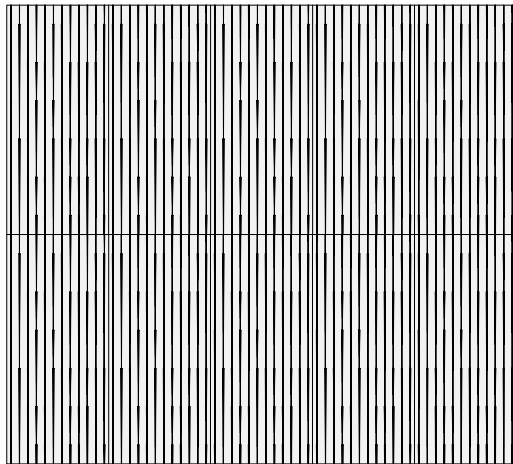

Layout 4

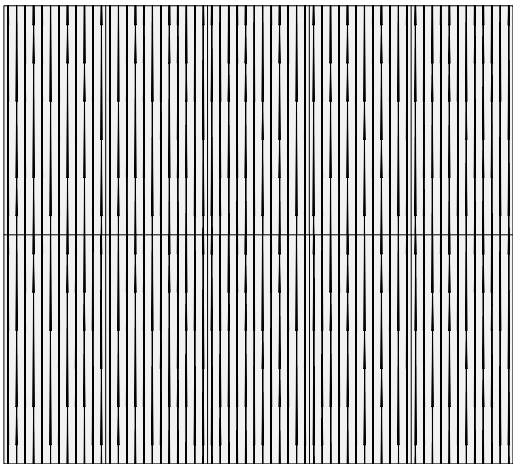


Perspective

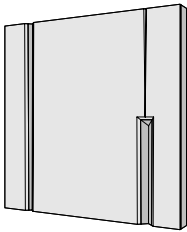


Recommended Layouts


Vapor

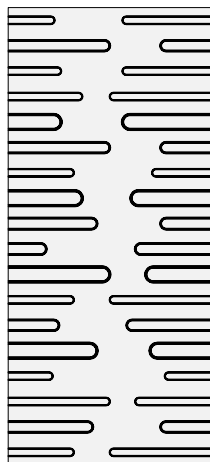


Layout 1

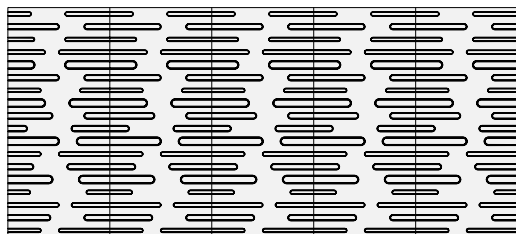


Layout 2

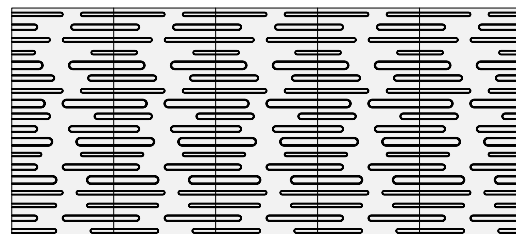


Layout 3

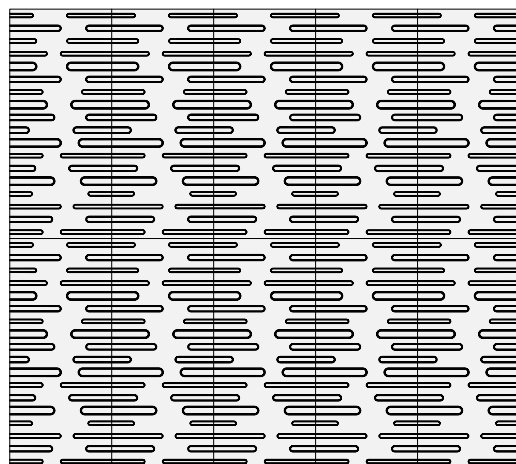

Layout 4

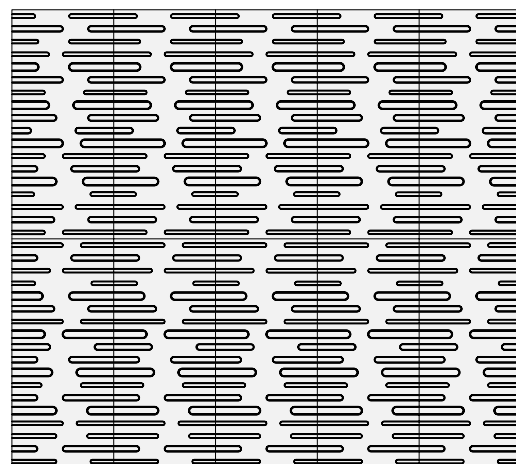

Perspective

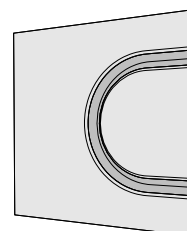


For questions or additional product information,
visit [acoufelt.com.au](https://www.acoufelt.com.au) or call 1800 626 462


Fracture Two-Tone Wall Panels | March 2026

Mounting Methods


Adhesive backing

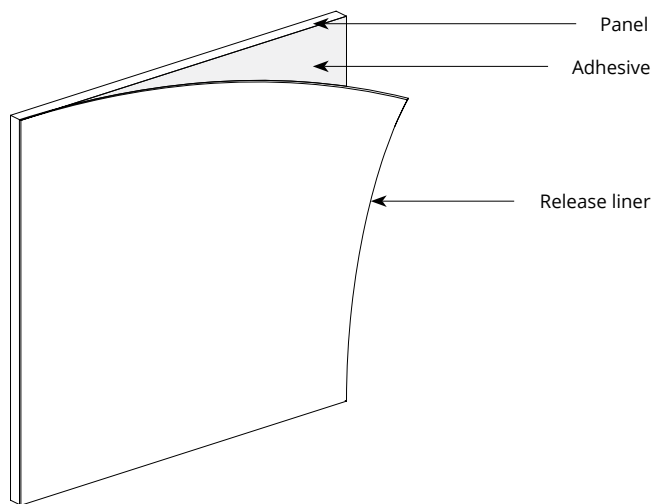

Construction adhesive

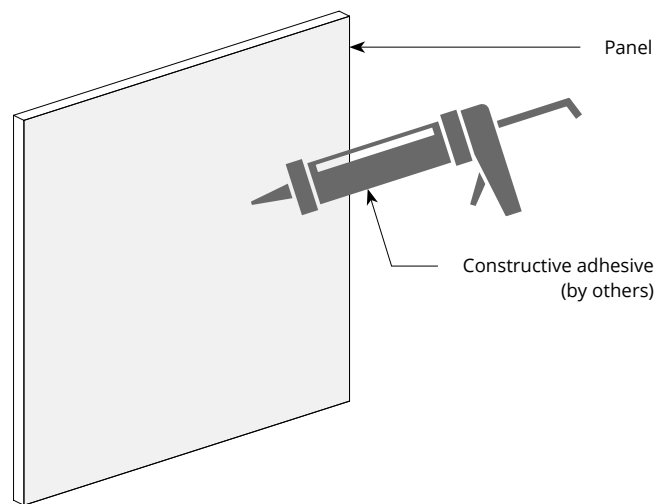

Z-clip wall mount

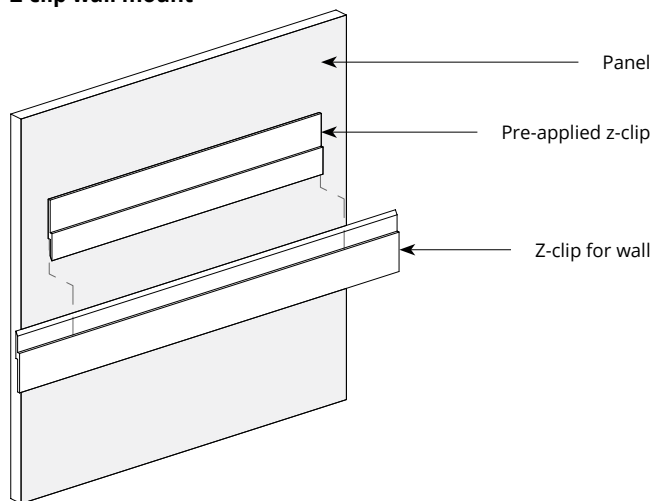

** For wall mount applications only.*




For questions or additional product information,
visit [acoufelt.com.au](https://www.acoufelt.com.au) or call 1800 626 462

Fracture Two-Tone Wall Panels | March 2026

Acoustic Performance

Test Method	ASTM 354-2006
Install Method	A
Rating Method	ISO 11654-2002
Test Results	14mm NRC 0.55 NRC 0.70, 20mm air gap NRC 0.75, 50mm air gap SAA 0.56, no air gap SAA 0.70, 20mm air gap SAA 0.76 50mm air gap 26mm Pending product testing

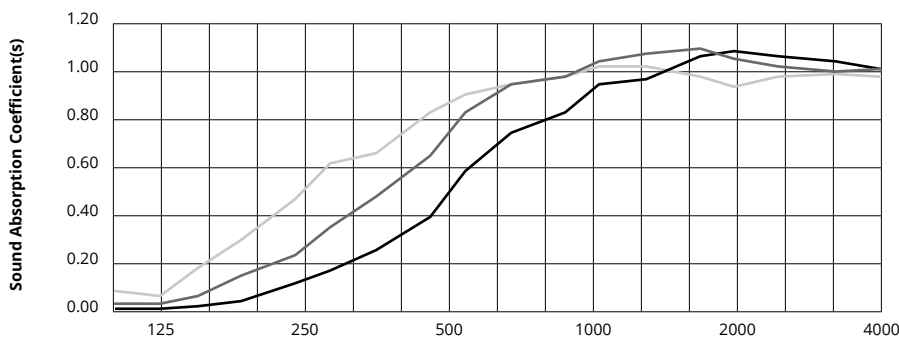

Frequency f (Hz)	125	250	500	1000	2000	4000	NRC
14mm	0.01	0.11	0.37	0.78	1.00	0.98	0.55
14mm, 20mm air gap	0.03	0.22	0.61	0.93	1.03	0.94	0.70
14mm, 50mm air gap	0.06	0.44	0.78	0.92	0.92	0.93	0.75
26mm	Pending product testing						

What is a Noise Reduction Coefficient (NRC)?

You'll find the NRC rating in the specifications of all of our products. This acronym stands for Noise Reduction Coefficient, and is expressed as a single number, a rating that describes the degree to which acoustic products can absorb sound.

You can use NRC values to understand the overall performance of our acoustic wall and ceiling products. The higher the NRC, the better the product is at soaking up the sound.

Performance Indices: Noise Reduction Coefficient (NRC) results represent the absorption coefficients measured at the one third octave bands at 125, 250, 500, 1000, 2000 and 4000 Hz rounded to the nearest 0.05. Acoustic testing has been performed according to the methods mentioned above. Customization of installation of the product could alter the results. Sound Absorption Average (SAA) indicates the absorption coefficient average for the twelve one-third octave bands ranging between 200 and 2500 Hz.

 For questions or additional product information, visit acoufelt.com.au or call **1800 626 462**

Fracture Two-Tone Wall Panels | March 2026